### JA ワイパーレール清掃のお願い

付属の『ユーザーズガイド』では週に1度の目安で定期 清掃を、①プリントヘッド、②ワイパー、③キャップの 順番で行うようにお願いしていますが、最後に④ワイパー レールの清掃を追加して行ってください。以降で、ワイ パーレールの清掃手順を説明します。

#### !重要

ワイパーレールの清掃を怠るとワイパーが正常に動作しなくなり、本機の故障の原因となります。

#作パネルのメニューから [メンテナンス] ー [ヘッドメンテナンス] ー [ヘッド移動] を行うと、プリントヘッドが清掃位置まで移動します。その後、左右両側のメンテナンスカバーを開けると以下の画面が表示されます。

ヘッドメンテナンス 1/2

マニュアルを参照してヘッド周辺、 キャップ、ワイパーの清掃を行い ます。

清掃終了後、(OK)を押します。


2 『ユーザーズガイド』をご覧になり、プリントヘッド周辺、ワイパー、キャップの清掃をします。 清掃終了後、操作パネルの[OK] ボタンを押すと、 ワイパーが奥側に移動し以下の画面が表示されます。

ヘッドメンテナンス 2/2

次にワイパーレールの清掃を行います。

清掃が終了したら、メンテナンス カバーを閉めて(OK)を押します。

3 ワイパークリーナーを取り外します。 図のようにつまんで引き上げます。

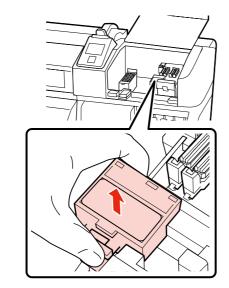


♪ ワイパーレールを清掃します。

クリーニング棒を別売のインククリーナーに浸して、図の部分を拭き取ります。





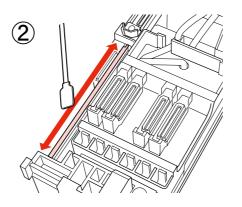

- 5 手順 3 で取り外したワイパークリーナーを元に 戻します。
- 6 左右のメンテナンスカバーを閉めて、操作パネルの [OK] ボタンを押すと終了です。

# sc清洁刮片导轨

尽管捆绑的《用户指南》仅提及要定期执行部件清洁(至少一周一次),顺序为(1)打印头、(2)帽、(3)刮片,还需要进行另外的清洁(4)刮片导轨。下面说明如何清洁刮片导轨。

### 重要提示:

如果不清洁刮片导轨,可能引起打印机故障。

1 从打印机的操作面板菜单,选择 **维护>打 印头维护>移动打印头** 将打印头移动至清洁位置。打开左侧和右侧的维护盖,再按操作面板上显示的信息操作。

打印头维护 1/2 参见文档并清洁帽、刮片和打印头周围。完成清洁后按 OK。

2 参见《用户指南》并清洁打印头周围的区域、刮片和帽。清洁后,按OK按钮将刮片移动到之前的位置,控制面板将显示如下信息。

打印头维护 2/2 清洁刮片导轨。 完成清洁后,关闭维护盖并按 OK。

3 取下刮片清洗器。 如图所示捏住清洗器,并从打印机中取下。




**1** 清洁刮片导轨。

用墨水清洁剂(独立可用)润湿清洁棒, 并用它清洁图示区域。





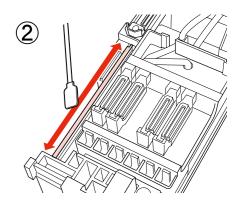

- 5 重新将刮片清洗器(第3步取下的)装回原来的位置。
- 6 关闭左侧和右侧的维护盖,再按操作面板 上的**OK**按钮结束。



## **EN Cleaning the Wiper Rail**

While supplied *User's Guide* instructs you to perform regular (at least weekly) maintenance in the following order: (1) the print head, (2) caps, and (3) the wiper, you should also be sure to perform regular maintenance on (4) the wiper rail as described below.



### Important:

Failure to regularly clean the wiper rail could result in product malfunction.

In the printer control panel menu, select
Maintenance > Head Maintenance > Move
Head to move the print head to the cleaning
position. Open the left and right maintenance
covers and confirm that the following message is
displayed in the control panel.


Head Maintenance 1/2
See documentation and clean caps, wiper and around print head.
Press OK after cleaning.

Clean the area around the print head, the wiper and the caps as described in the *User's Guide*, and then press the **OK** button to move the wiper to the rear. Confirm that the following message is displayed in the control panel.

Head Maintenance 2/2
Clean wiper rail.
After cleaning, close
maintenance covers and
press OK.

Remove the wiper cleaner.

Grasp the cleaner as shown and lift it from the printer.

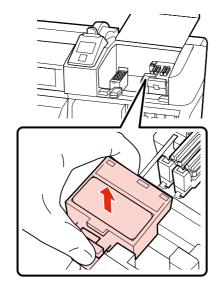


Clean the wiper rail.

Dampen a cleaning stick with ink cleaner (available separately) and use it to clean the area shown.





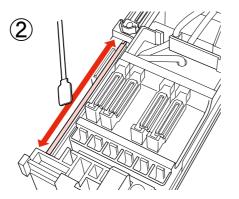

- 5 Replace the wiper cleaner you removed in Step 3.
- Close the left and right maintenance covers and press the OK button.

## TC 清潔刷具滑軌

雖然隨附的進階使用說明提到執行例行零件清潔 (一週至少一次),依順序為(1)印字頭、(2)導墨蓋、(3)刷具,請再增加(4)刷具滑軌的清潔。以下說明如何清潔刷具滑軌。



如果沒有清潔刷具滑軌,可能會造成印表機故障。

1 從印表機控制面板選單中選擇
[Maintenance] > [Head Maintenance] >
[Move Head],印字頭將會移至清潔位置。
打開左側和右側的維護護蓋,然後依照控制
面板上顯示的訊息進行操作。

Head Maintenance
See documentation and
clean caps, wiper and
around print head.
Press OK after cleaning.

1/2

2 請參考進階使用說明,清潔印字頭周圍區域、刷具和導墨蓋。清潔完成後,按下 OK鍵,刷具將會移至後方位置,然後依照控 制面板上顯示的訊息進行操作。

Head Maintenance 2/2
Clean wiper rail.
After cleaning, close
maintenance covers and
press OK.

3 取出刷具清潔劑。 如圖所示,握緊清潔劑並將其從印表機取出。




1 清潔刷具滑軌。

用清潔棒沾取墨水清潔劑(個別銷售),然後 清潔下圖所示的區域。





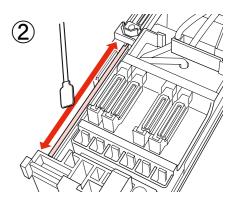

- 5 將刷具清潔劑(已於步驟 3 中取出)放回原本的位置。